


KEIHIN FCR-MX PARTS

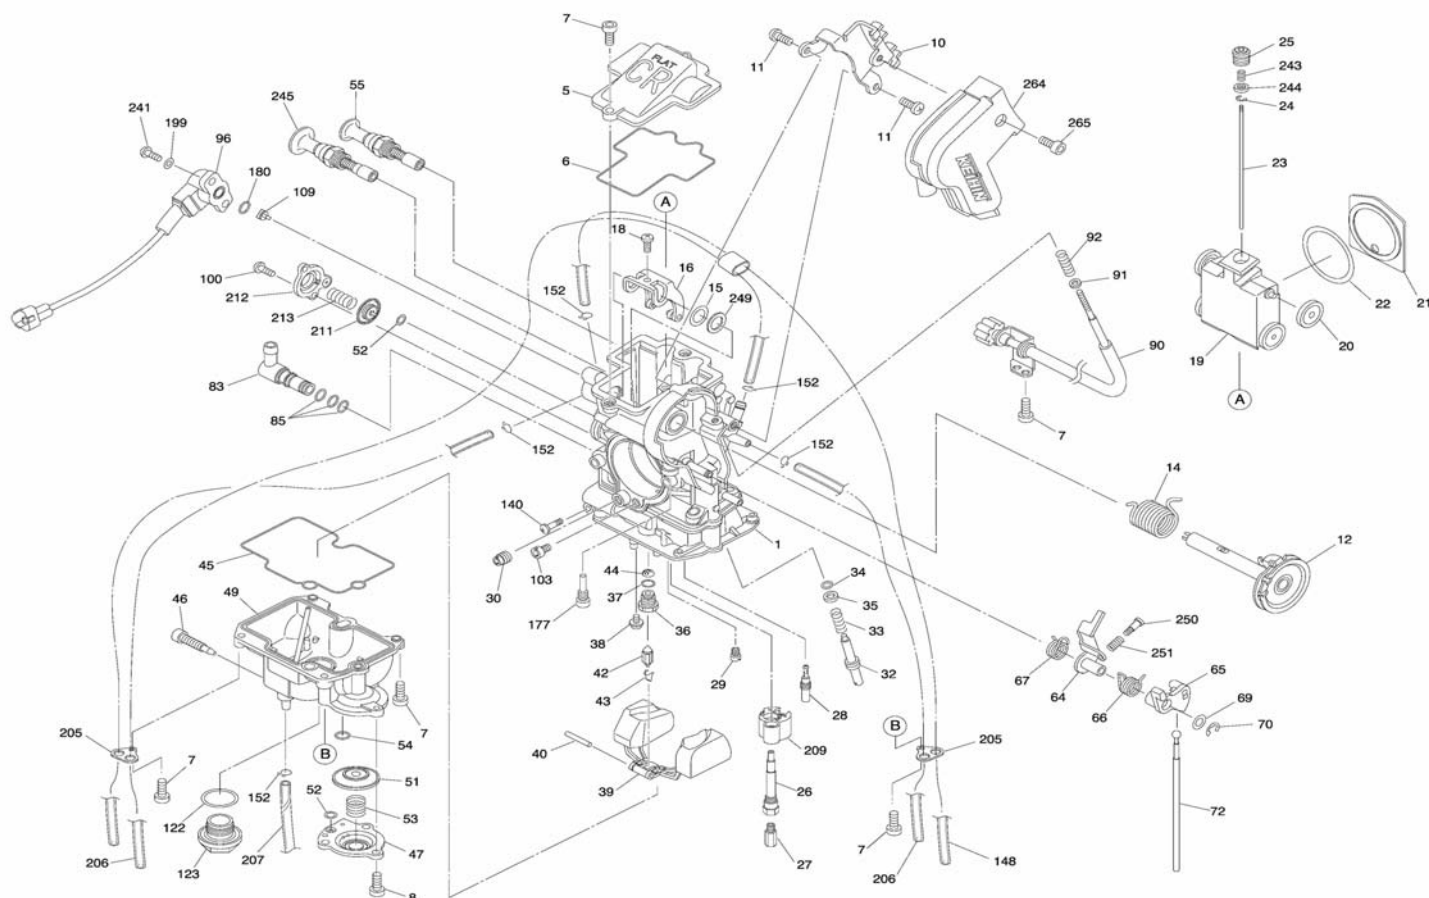

016-927 39 FCR-MX air cut valve/hot start/TPS

Part Number	Description
016-915	37 FCR-MX
016-916	37 FCR-MX air cut valve/hot start
016-917	37 FCR-MX air cut valve/hot start/TPS
016-925	39 FCR-MX
016-926	39 FCR-MX air cut valve/hot start
016-927	39 FCR-MX air cut valve/hot start/TPS
016-935	41 FCR-MX
016-936	41 FCR-MX air cut valve/hot start
016-937	41 FCR-MX air cut valve/hot start/TPS

5.	Top Cover 021-710	1030-897-2000	all	36.	Valve Seat Gravity Flow applications use 018-504 N. Valve	N361-04-n n1	
6.	Gasket, Top Cover 021-711	1202-895-6000	all		021-240	3.20	all
7.	Screw M4x12 021-700	0136-806-1100	all		021-241	3.40	"
8.	Screw M4x8 021-010	0136-808-1100	all		021-242	3.60	"
10.	Bracket 021-712	1190-B40-2100	all		021-243	3.80 Std. Singles	"
11.	Screw, 021-713	93500-05008-1H	all		021-244	4.00	"
12.	Throttle Shaft Comp. 5025-B35-2201		all	37.	O-Ring, Valve Seat 021-047	16958-397-7710-M1	all
14.	Coil Spring 021-718	1305-A83-2000		38.	Screw, Valve Seal 021-250	0118-806-1100	all
15.	Washer 021-018	0301-092-7000	all	39.	Float Comp. 018-202	1052-856-2100	all
16.	Link Arm Comp. 021-721	1061-831-2101	all	40.	Arm Pin 018-670	W9525-25250	all
18.	Stop Screw 021-723	4110-825-1100	all	42.	Float Valve Comp. 018-504	1062-814-2100	all
19.	Throttle Valve Comp. 021-320	N501-49C01	all	43.	Clip, Float Valve 018-674	0405-019-1000	all
20.	Roller 021-027	1119-803-7002	all	44.	Fuel Screen 021-730	2009-811-2100	all
21.	Vacuum Release Plate 021-725	1609-809-2100	all	45.	Packing, Float Bowl 021-731	1202-896-6000	all
22.	Seal 021-726	1099-817-6000	all	46.	Drain Screw 021-733	1198-810-2002	all
23.	Jet Needles N427-OC-n n n		See pg. 182	47.	Cover, Accelerator Pump 021-057	1230-826-2002	all
24.	Clip, Jet Needle 018-616	0403-802-1000	all	49.	Float Bowl 021-734	1050-948-2101	all
25.	Needle Set Screw 021-727	1421-802-2000	all	51.	Diaphragm Comp. 021-735	1201-858-2700	all
26.	Main Nozzle 021-728	1154-842-2000	all	52.	U-Ring 021-067	W9353-36000	all
27.	Main Jet 99101-357-n n n		See pg. 206	53.	Coil Spring, Accelerator Pump 021-069	1300-142-2000	all
28.	Slow Jet N424-21-n n n		See pg. 207	54.	O-Ring, Accelerator Pump 021-071	W9351-19058	all
30.	Slow Air Jet 99101-393-n n n (could be replaced with Slow Air Screw(see #129 & 130))		See pg. 183	55.	Starter Valve Comp. 021-737	1166-844-2100	all
32.	Pilot Screw 021-729	N446-26A00	all	64.	Link Lever Comp. 021-739	1100-914-2100	all
33.	Coil Spring, Pilot Screw 021-041	1290-812-2001	all	65.	Link Lever 021-740	1100-915-7000	all
34.	O-Ring, Pilot Screw 021-043	16075-KG8-9010-M1	all	66.	Coil Spring #1 021-719		
35.	Washer, Pilot Screw 021-045	0301-803-2000	all				

KEIHIN FCR-MX PARTS

85.	O-Ring, Fuel Joint 018-755	W9351-13057	all
90.	Step Screw Comp. 021-745	1034-815-4500	all
91.	Washer, Stop Screw 021-101	0301-078-1200	all
92.	Coil Spring, Stop Screw 021-103	1300-112-2000	all
96.	Thrpittle Position Sensor(TPS) 021-746	1614-862-2100	all
100.	Screw 021-105	0136-804-1100	all
103.	Main Air Jet - 99101-393		See pg. 206
110.	Collar 021-747	16145-MZ2-7800	all
122.	O-Ring 018-664	16173-001-0040	all
123.	Drain Bolt 018-128	16162-ND4-7511-M1	all
140.	Scrw 021-749	0110-804-1200	all
148.	Vent Hose 021-751	0803-884-0100	all
152.	Hose Clip 018-098	W9535-35000	all
177.	Stop Screw 021-722	1034-905-2000	all
180.	O-Ring 021-732	16978-ZB9-0050	all
199.	Washer 021-753	0301-261-6G5	all
205.	Hose Retainer 018-505	16179-KZ4-6900	all
206.	Vent Hose 021-7520	0803-878-0000	all
207.	Vent Hose 021-752	95003-07033-31	all
209.	Buffer Plate 021-754	1157-812-7000	all
211.	Diaphragm Comp. 0021-736	W1470-MW0-7500	all
212.	Cover 021-755	1230-850-2000	all
213.	Coil Spring 021-715	1290-A19-2000	all
241.	Screw (Torx) 021-757	0137-261-36G5	all
243.	Coil Spring 021-716	1290-A65-200	all
244.	Collar 021-748	1118-B36-20000	all
245.	Starter Valve 021-738	1166-845-2100	all
249.	Washer 021-758	W1795-164-9900	all

250.	Stop Screw 021-724	16124-KR3-6010-M1	all
251.	Coil Spring 021-720	16053-KT7-0030	all
264.	Cover 021-756	1230-869-7001	all
265.	Cover Screw 021-759	0136-839-1100	all